



Panasonic Lumix DMC-ZS25 Screen Replacement

Replace your camera's screen, so you can look at the photos on the screen.

Written By: Abbas Khan



INTRODUCTION

These steps will guide to simply replace your camera's screen.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Spudger](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
-

Step 1 — Screen



- Open the four 3.40 mm screws from the right and left sides of your Panasonic Lumix Camera.
- Remove the two 2.60 mm screws located next to the battery.

Step 2



- Use the plastic opening tool to open the outer cover of your device.
 - The easiest place to open your device is from the HDMI port.
- ⚠ Open it gently to avoid breaking the cover.

Step 3



- Use a spudger to detach the ribbon cable.

⚠ Be careful when you use the spudger because you do not want to break the the ribbon.

Step 4



- Once you unlock the screen cable, use the plastic opening tool to lift the buttons board away from the circuit board.

Step 5



- Gently, lift the screen using the plastic opening tool as shown in the picture.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-17 05:13:12 PM.